

## Comparison matrix

# Keyless device options



	IOX-KEYBOX	IOX-KEYLESS
<b>Pre-installation setup</b>	Key fob placed into the unit to mechanically invoke commands.	Key fob soldered into the unit to electrically invoke commands.
<b>Unit is reusable with new vehicle?</b>	✓ * for the same key fob type	✗
<b>Key fob is reusable</b>	✓	✗
<b>Bladed key can be used to start vehicle</b>	✓ *Can be accessed from the securely locked unit.	✓ *Second key is required
<b>Installation</b>	Keyless hardware connects to GO9 as an IOX® expansion	
<b>Commands</b>	Lock, Unlock, Locate	

# Keyless device

## IOX-KEYBOX



Pre-installation unit setup	Supported vehicle types	Push button start vehicles	Key is driver accessible + Bladed key start vehicles
<p><b>STEP 1:</b> Order a unit designed for your key fob type.</p> <p><b>STEP 2:</b> Attach unit to the GO device using IOX port.</p> <p><b>STEP 3:</b> Place key fob within the unit.</p>	<ul style="list-style-type: none"><li>• Passenger cars</li><li>• Light Commercial Vehicles</li><li>• Light duty trucks (&lt;class 6)</li><li>• Electric vehicles</li></ul>	<ul style="list-style-type: none"><li>• <b>Unlock:</b> Power is enabled to the key fob in the unit allowing driver to push button start.</li><li>• <b>Lock:</b> Power disabled to key fob in unit disabling push button start. Fob in locked unit drawer cannot be accessed.</li></ul>	<p>Access the key from the unit and return at end of usage period; key is stored in the unit between drivers.</p> <p><b>Unlock at start of usage:</b> Unit is unlocked for the driver to retrieve the key.</p> <p><b>Lock:</b> Sensors (future) detect if the key was returned.</p> <ul style="list-style-type: none"><li>• <b>Key returned:</b> Unit drawer is locked.</li><li>• <b>Key not returned:</b> Lock request fails.</li></ul>

# Keyless device

## IOX-KEYLESS

Pre-installation unit setup	Push button start vehicle	Bladed key to start?
<p><b>STEP 1:</b> Order a unit</p> <p><b>STEP 2:</b> Ship key fobs to Geotab (NA only) or 3rd party.</p> <p><b>STEP 3:</b> Key fobs assembled into unit.</p>	<p><b>Unlock:</b> Power enabled, enabling push button start.</p> <p><b>Lock:</b> Power disabled to key fob in unit, disabling push button start.</p>	<p>Driver accesses and stores second key (outside unit) in vehicle.</p> <p>Optional integrated starter inhibitor adds extra security.</p>

